

OWNER'S MANUAL



OPERATING INSTRUCTIONS

CAUTION:
READ AND
SAVE THESE
INSTRUCTIONS.

Any questions or comments?

Call I-800-526-2832

Mon.-Fri. 8 a.m.-4 p.m. Central Time

INTRODUCTION

Congratulations on your purchase of a Sunbeam 560 Air Cleaner. Your unit has been designed for years of continuous operation.

NOTE: This owner's manual should be read thoroughly before your air cleaner is operated. Retain your owner's manual for future reference.

HOW THE SUNBEAM 560 AIR CLEANER WORKS

Your air cleaner has a unique High Efficiency Cartridge (HEC) that combines four filters into one compact, disposable element for high efficiency cleaning and easy replacement of cartridge.

Polluted air enters into the air cleaner through the front grill. (Figure 1) As shown in Figure 2, the fan pulls in dirty air and the Pre-Filter (#I) traps large particles (hair, lint, etc.). The smaller particles (dust, smoke, pollen) are captured when the air passes through the 2-stage filter. (#2 and #3) The air then passes through a Charcoal After-Filter (#4) that helps remove household odors. Next, the Negative Ion Generator (#5) releases negative ions into the air for extra air freshening. The cleaned air then passes back into the room through the top grill. (Figure 1)

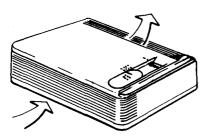


Figure 1

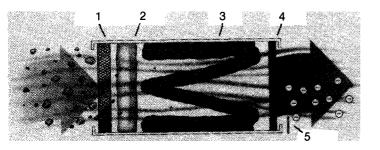


Figure 2

LOCATION

Remove and discard the plastic bag covering your air cleaner. Locate your air cleaner near an electrical outlet.

NOTE: DO NOT USE AN EXTENSION CORD TO SUPPLY POWER TO YOUR AIR CLEANER.

Remember, the air cleaner must be placed so that air can freely circulate into the front grill and out of the top grill. (Figure 1) Never place your air cleaner on soft surfaces (such as beds, sofas or carpet) or next to sources of heat (such as stove tops, ovens, etc.).

ABOUT NEGATIVE IONS

Negative ions, which occur naturally in our environment, are simply air molecules with a negative charge that help to remove positively charged pollutants from the air. However, when indoor air is cooled or recirculated, the negative ions get stripped out of the air. The negative ion generator in your air cleaner replenishes the negative ions in your home. These negative ions are attracted to pollutants and then to any grounded surface, e.g. walls.

OPERATION

Plug the cord into any standard household electrical outlet. (See data label on bottom of your air cleaner for electrical specifications and power consumption.)

Figure 3 is a diagram of the slide switch label. Initially, run the unit on HIGH for 1 minute before switching to the desired speed. The "FAN ONLY" position allows you to operate your air cleaner without the Negative Ion Generator engaged. When the Negative Ion Generator is engaged, the operating light will be illuminated. (See the above section "About Negative Ions" for more information.) Your air cleaner is designed for continuous operation — peak efficiency is obtained when the air cleaner remains on constantly. For best results, select "DAILY USE" setting.

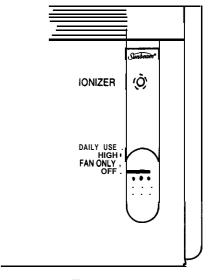


Figure 3

MAINTENANCE

Cabinet

The outside of the cabinet can be cleaned by using a soft, clean, damp cloth. Never immerse the unit in water

Replacing the High Efficiency Cartridge (HEC)

The High Efficiency Cartridge will need to be replaced every 3-4 months under normal operating conditions. Turn off the air cleaner and unplug it from the electrical power source.

Remove cabinet lid by depressing tab located under lid overhang (see Figure 9 for exact tab placement). Slide lid forward from base and lift off. (Figure 4)



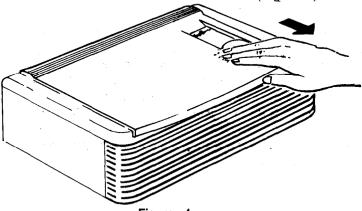



Figure 4

To replace the High Efficiency Cartridge, push the locking latch (Figure 5) away from the filter, lift used filter out and insert new filter. The used filter can now be discarded

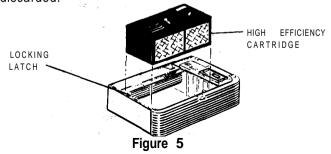

Replace the cabinet top by positioning over the unit. (Figure 6) Gently slide the top forward until the top drops into place. (Figure 7) Slide the top backward until flush with the back of the unit. (Figure 8)

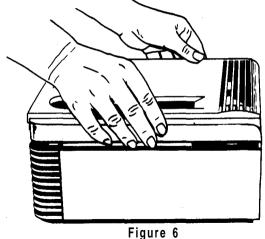

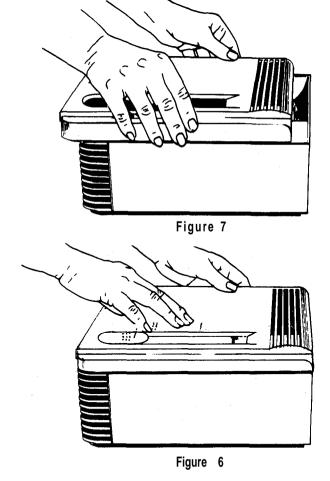

To Clean the Negative Ion Generator Needle

The Negative Ion Generator needle is located in the right rear of the air cleaner (Figure 9) and should be cleaned every 60 days.

Turn off the air cleaner and unplug it from the electric power source. Wait approximately 1 minute before removing top and cleaning.

Carefully use a cotton swab dipped in alcohol and wipe off the dirt from the needle. Using a dry cotton swab, make sure the needle is dry.

Replace the cabinet top by following the steps listed above. (Figures 6, 7 and 8)

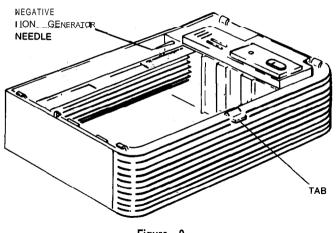


Figure 9


TO ORDER REPLACEMENT PARTS

If you cannot locate replacement parts through your local retailer, use the enclosed convenient reorder form. Allow four weeks for delivery.

TROUBLESHOOTING CHECKLIST

Many service problems can be solved quite easily. The chart below lists potential problems and how to correct them. Remember, check the simple things first.

CONDITION	WHAT TO CHECK	WHAT TO DO
Unit will not operate.	1. Power Cord	1. Plug in power cord.
	2. Electrical Outlet	Check for power to the electrical outlet. Plug a table lamp into the electrical outlet to ensure power availability.
	3. ON/OFF Slide Switch	3. Set ON/OFF Slide Switch to desired speed.
	Cabinet Top is properly intalled	4. Refer to Figures 6, 7 and 8, Page 2.
Unit does not operate on "DAILY USE" setting.	Setting of ON/OFF Slide Switch	Set Slide Switch on HIGH. Run unit for one mInute and reset switch to DAILY USE setting.
Unit does not remove pollutants	High Efficiency Cartridge	Simply remove the High Efficiency Cartridge. Bylooking at it, you will see a discoloration of the white filters which lets you know that the unit is collecting.
Unit is making a whistling/roaring noise	High Efficiency Cartridge	Replace the High Efficiency Cartridge.
Unit appears to cause interference with TV/Radio	Location of Unit	It may be necessary to relocate your unit at least 4 feet away from TVs, Radios and Computers. Do not operate unit on the same electrical outlet as TV or radio.
Unit still does not operate properly	Recheck the above points	Return unit to Appliance Service Station, Hattiesburg, Mississippi, for service. See Warranty Information on back cover for address.

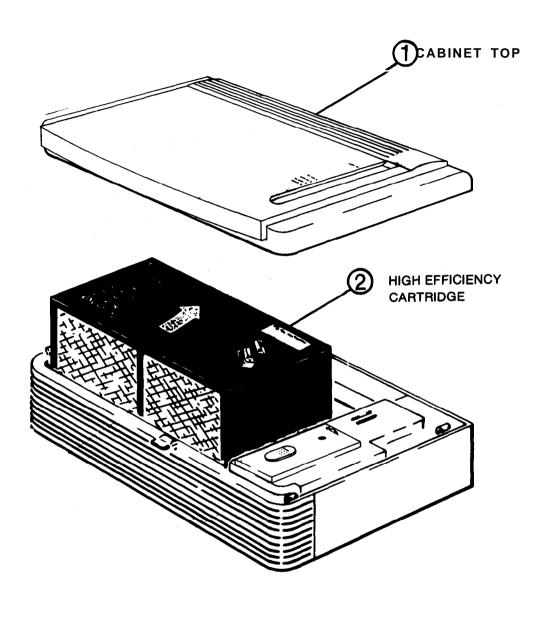

REPLACEMENT PARTS

Key Number	Part Number	Description
1	344951-001	Cabinet Top
2	6570	High Efficiency Cartridge

To order Replacement Parts, write to Appliance Service Center, 117 Central Industrial Row, Purvis MS, 39475.





OWNER'S MANUAL

LIMITED ONE YEAR WARRANTY STATEMENT

This product is warranted for one year from the date of purchase against electrical and mechanical defects in material and workmanship. If the unit fails to operate during this period, return it, prepaid, to Appliance Service Station, 117 Central Industrial Row, Purvis, Mississippi, 39475,for repair or replacement without charge at the manufacturer's option. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Warrantor: Sunbeam-Oster Household Products

Made in America